



BAVARIAN AUTOSPORT

Non-ABS Front Wheel Bearing Hub Assemblies Installation Instructions

NOTE: Due to the unavailability of the earlier non-ABS front wheel bearing hubs, the listed non-ABS models must use the later ABS equipped bearing hubs. Slight modification of the hub is required, as follows. ABS equipped models require no changes.

3 Series

84 thru 85

PART NUMBERS:

31 21 1 468 752 & WBK 325

5 Series

82 thru 85

31 21 1 468 753 & WBK E28A

PROCEDURE:

1. Follow the outlined procedures in the appropriate repair manual for replacement of the bearing hubs.
2. To install the ABS hub on a non-ABS model, the ABS pulse wheel must be removed from the hub. Clamp the wheel mounting flange of the hub in a bench vise. Use a standard cold chisel and hammer to split the ABS pulse wheel. Position the chisel at 12:00 o'clock on the pulse wheel, between two teeth, and strike it with the hammer. This will split the pulse wheel, it can then be spread apart and removed from the hub.
3. Continue with the standard installation of the bearing hub assembly.

