




Zubehör - Einbauanleitung

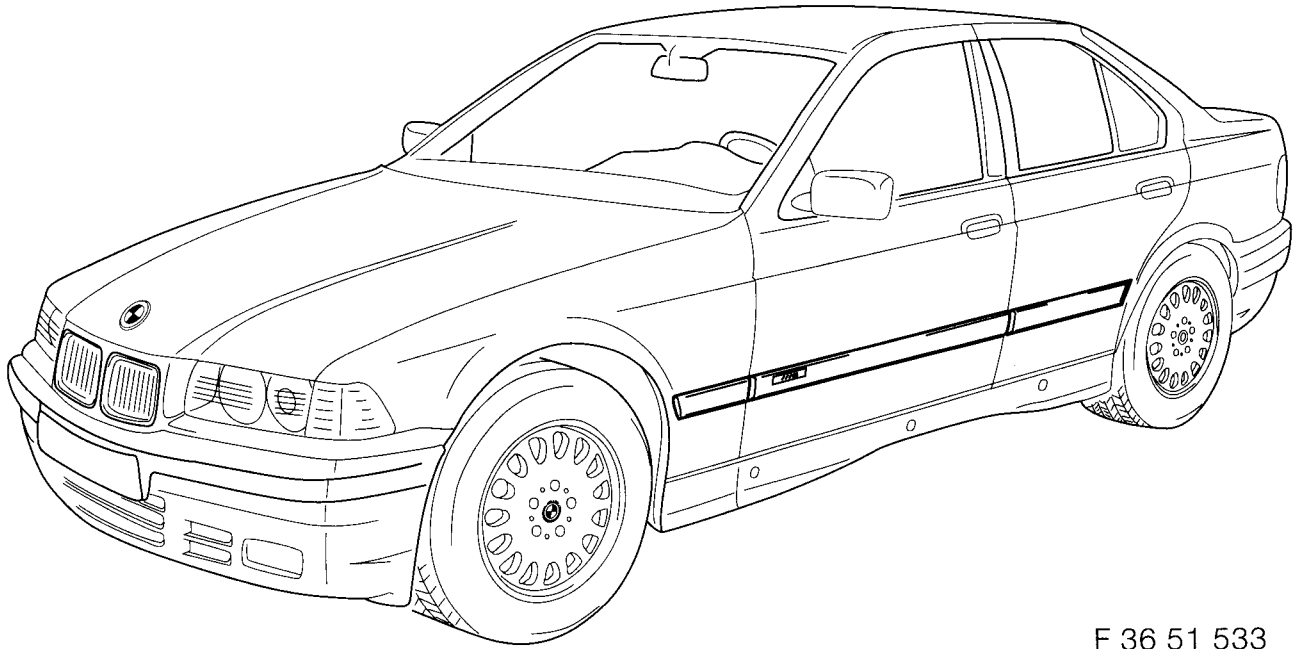

F 36 51 533

Installation Instructions

Genuine BMW M Impact Trim Strips

3 Series E36 Convertible, Coupe (2-door) / 3 Series E36 Saloon (4-door) / 3 Series E36 compact (2-door)

Genuine BMW M Impact Trim Strips

3 Series E36 Convertible, Coupe (2-door)

3 Series E36 Saloon (4-door)

3 Series E36 compact (2-door)

Technical knowledge is required.

1. Removing impact trim strips

F 36 51 534

The existing impact trim strips (1) must be removed.

F 36 51 535

Starting from one end, carefully pull off impact trim strips (1) by hand.

Remove any retaining clips and grommets left behind.

Clean holes (2) in car.

**Only for E36 Saloon (4-door) and
E36 compact (2-door)**

F 36 51 536

Fit new grommets (1) in holes (2).

Only for E36 Convertible, Coupe (2-door)

F 36 51 537

Fit new grommets (1) and (2) in holes as illustrated.

2. Installing BMW M impact trim strips

The grommets must be slightly moistened to facilitate installation of impact trim strips.

F 36 51 538

Align retaining clip (1) and, starting from one end, press M impact trim strips into grommets (2).

F 36 51 539

If necessary, correct position of impact trim strips (1) at door gap (2).

