


BAVARIAN AUTOSPORT

Clear Tail Lights Installation Instructions

SPECIAL NOTE FOR 318i/is ONLY: On the passenger side, locate the wiring harness connector plug (see illustration). There are two wires going into the connector which are blue with a red stripe. These two wires must be connected together. Do not remove the wires from the connector plug. Cut each of the blue with red wires a few inches away from the connector plug. Strip about 1/4 inch of insulation from each of the four cut ends. Use a standard in-line splice connector to connect all four of the wires together.

3 series


92 thru 98, 2 door (Except 318ti)
92 thru 98, 4 door
thru 98, 318ti

PART NUMBERS:

E36 2TCLR
E36 4TCLR
E36 TITCLR

PROCEDURE:

1. Open trunk lid or hatch.
2. Locate the tail light inner trim covers at the left and right corners of the trunk rear panel. Rotate and release the fasteners and gently remove the covers from the vehicle.
3. Unplug the wiring harness connector plugs from the tail light housings.
4. Remove the nuts which fasten the tail light housings to the rear panel. Gently pull the light assemblies to the rear and out of the tail panel.
5. Using the seals from the original light assemblies, install the Bavarian Autosport Clear Tail Light assemblies and replace the fastening nuts.
6. Plug the wiring harness connector plugs into the tail light assemblies. Replace the trim covers.

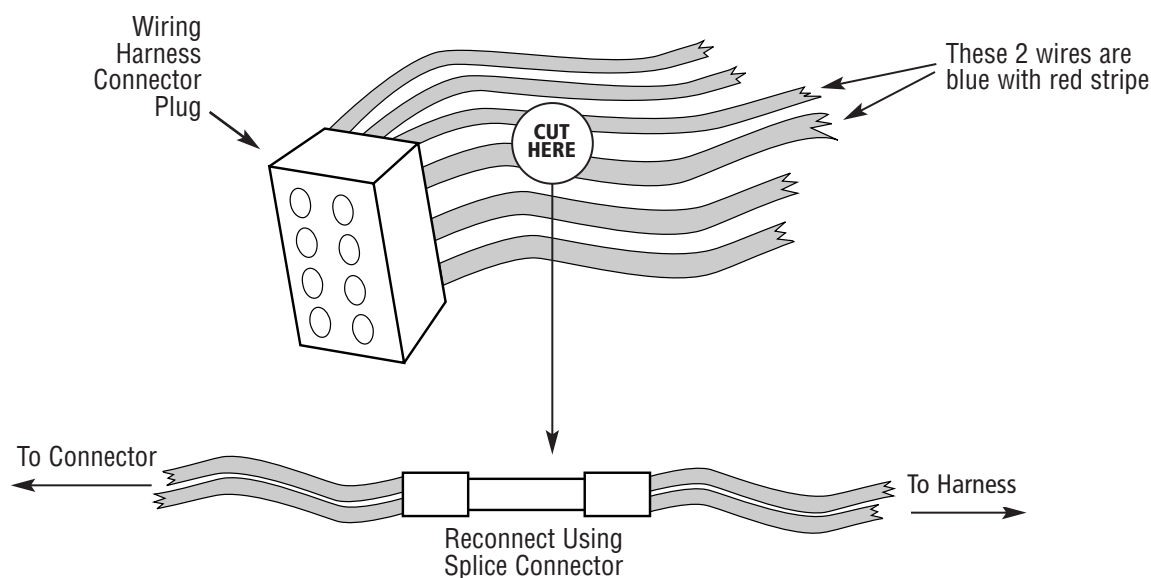

BAVARIAN
autosport

275 Constitution Avenue, Portsmouth, NH 03801

• 603.427.2002

Call Toll Free: **1.800.535.2002**

• Fax 800.507.2002

• www.bavauto.com