




INSTALLATION INSTRUCTION BMW KIDNEY COVERS

To maximize longevity of the new kidney please follow these steps:

1. **Thoroughly clean** chrome-plated original kidney with cleaning agent to achieve necessary adhesion (surfaces must be clean and dry).
2. Treat side to be glued of 'Shadow-Line' cover accordingly.
3. Carefully peel off protective foil from one side of 12 enclosed double-sided tape strips, and attach six strips of tape per kidney half to locations on the chrome surface marked by arrows (see illustration). Press edges firmly into place.
4. Remove other side of protective foil.
5. Place lower edge of 'Shadow-Line' cover centered on lower edge of chrome kidney at an angle (the upper edge points towards you). Tilt cover back and press entirely to chrome part. Use fingers of both hands to apply firm pressure to bonded areas.

By the way: The 'Shadow Line' can also be painted in body color before installation.

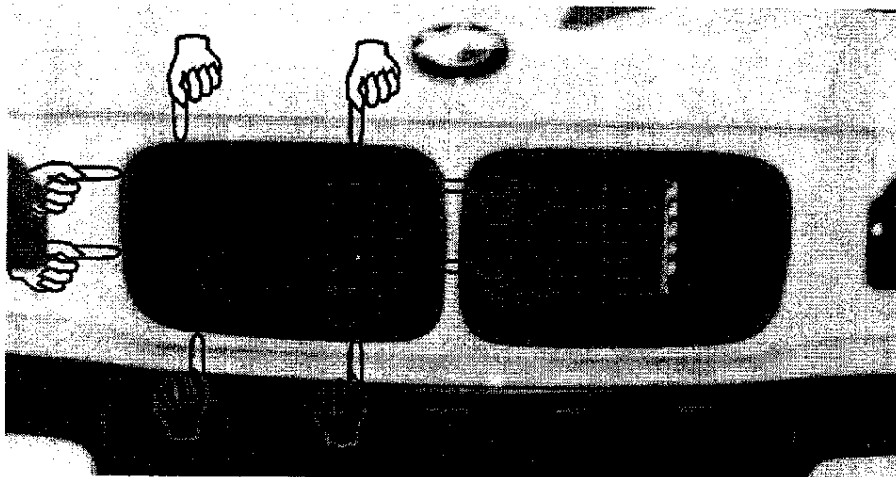

INS234



Bavarian Autosport

INST-HAMANN BLACK GRILLS

INSTRUCT

1180-99-292010