

**BAVARIAN AUTOSPORT**

Stressbar 3 Series 99 on Installation Instructions

3 Series

*99 on***PART NUMBER:**

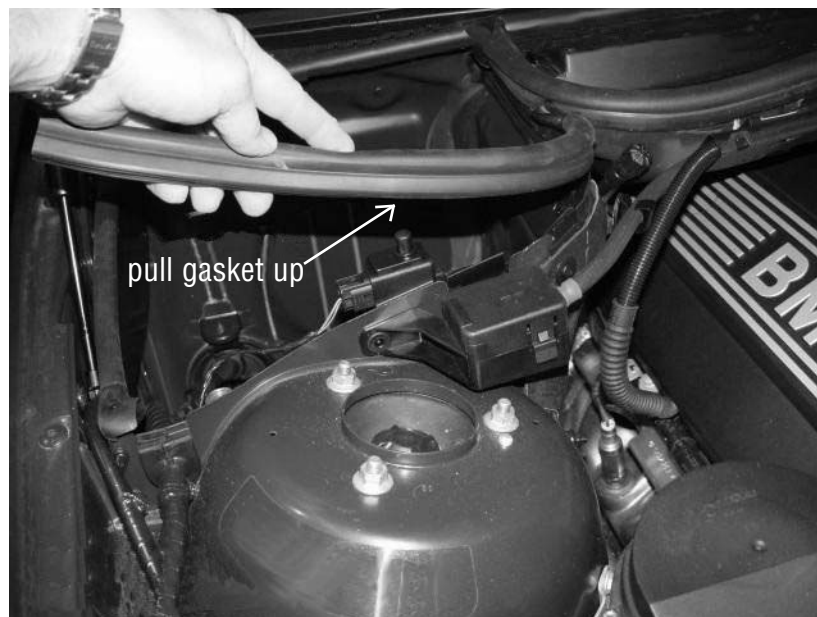
010436

PROCEDURE:

1. The positive cable junction block must be temporarily moved for clearance.



2. Remove compartment gasket.

**BAVARIAN**[®]
autosport

275 Constitution Avenue, Portsmouth, NH 03801

• 603.427.2002

Call Toll Free: **1.800.535.2002**

• Fax 800.507.2002

• www.bavauto.com

3. Junction box / hood switch securing rivet must be removed.



4. Pull up on hood switch assembly to release securing rivet.



5. Pull junction box assembly up.



6. Install stressbar.



7. Reinstall junction block / hood switch assembly.

