



**BAVARIAN AUTOSPORT**

# Clear and Smoke Parking Light Installation Instructions

**SAFETY WARNING:** Be sure the ignition switch and light switch are in the OFF position before removing or attaching any electrical connectors.

## 3 series

*Coupes 99 thru 2/03  
Sedans 99 thru 01  
(Except 99 M3 & Convertible)*

### PART NUMBERS:

*E46 PCLR  
E46 PSMK  
E46 2PCLR  
E46 2PCLR 02  
E46 2PSMK*

### PROCEDURE:

1. Open the engine hood.
2. Note the small oval shaped hole in the inner fender edge, just a few inches to the rear of the front edge (see Figure 1). Insert a long screwdriver (flat or phillips does not matter) into the access hole. Angle the tip of the screwdriver toward the inside of the vehicle and gently push down on the tip of the parking light securing tab (see Figure 2). At the same time, push the tip of the screwdriver toward the front of the vehicle (see Figure 1), in order to push the light assembly forward so it can be pulled out (see Figure 3). Repeat for the other side.
3. Remove the harness plugs from the bulb holder sockets at the back of the parking light assemblies.
4. Install the supplied amber bulbs into the ORIGINAL bulb holder sockets from the original light assemblies. Install these bulb holders into the new light assemblies.
5. Plug in the wiring harness plug to the bulb holder socket and install the new clear parking light assembly into the car. Be careful to align the 2 side alignment tabs into the corresponding sockets in the side of the headlight assembly (see Figure 4). Push the light assembly in until fully seated and the securing tab is locked. Repeat for the other side.



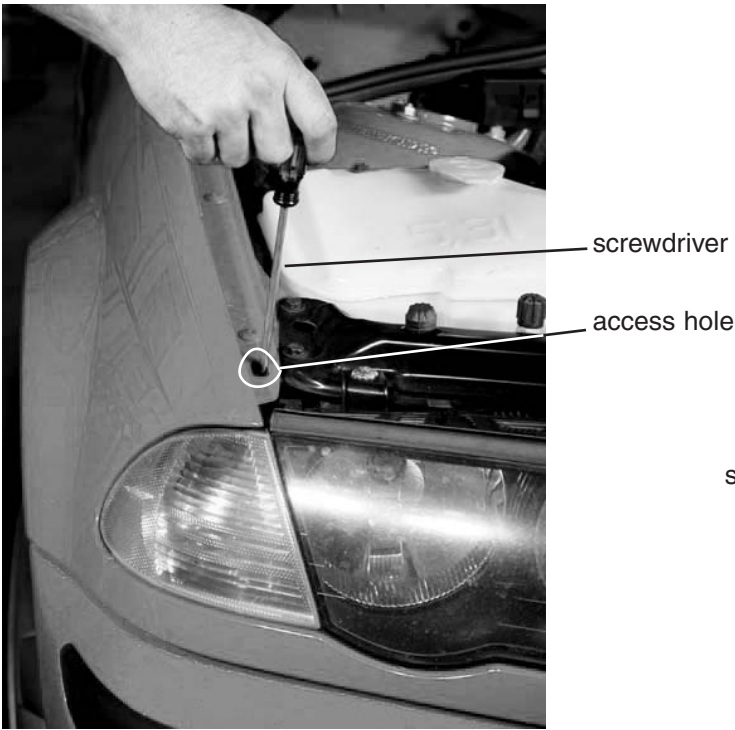


Figure 1



Figure 2



Figure 3

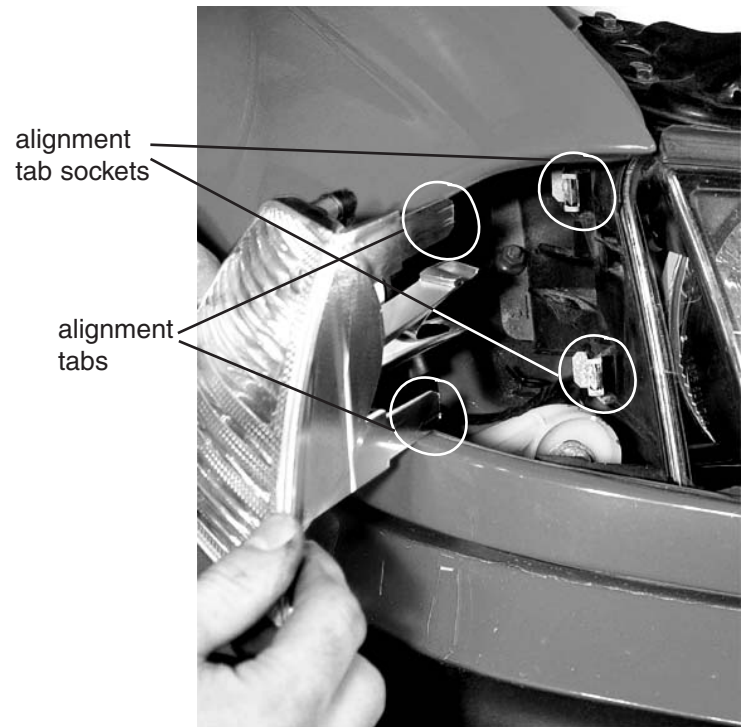


Figure 4