




BMW Parts and Accessories Installation Instructions

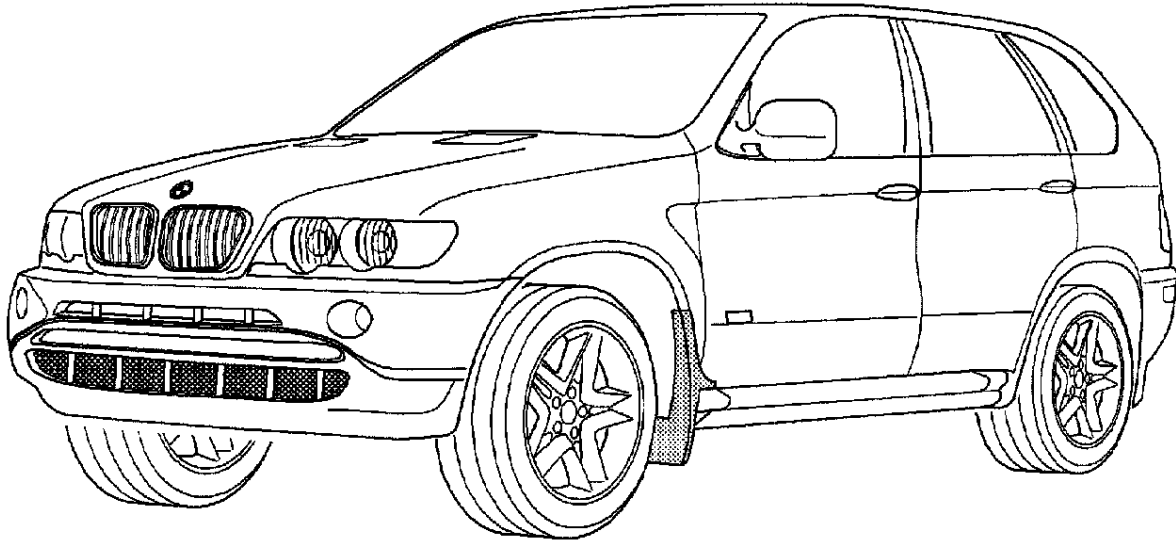

F 53 0189 B

BMW accessory mudflaps (front) installation kit

BMW X5 (E 53)

Not suitable for vehicles with accessory sports package

The installation time is approx. 0.75 hours, but this may vary depending on the condition of the car and the equipment in it.

Retrofit/Installation kit No. 82 16 0 004 466 only suitable for cars without SA 328
(side skirt)

82 16 0 004 467 only suitable for cars with SA 328
(side skirt)

