



BAVARIAN AUTOSPORT

Wiper Blade Installation Tips

NOTE: Remove the snap-on guide from the original driver side wiper blade, for possible use on the new Bosch or PIAA blades. See final note, below.

3 Series

99 thru 05

PART NUMBERS:

93455
93355
93055
93155
40922

PROCEDURE:

1. The passenger side blade will install as a direct replacement for the original blade unit.
2. Remove the driver side original blade.
3. Install the new Bosch or PIAA blade assembly to the wiper arm.
4. Position the blade in the wiper arm guide tabs:
 - A. Bosch & PIAA (without spoiler) – Position the left end of the blade between the first two guide tabs (from the left) on the wiper arm. Lower the blade assembly to the windshield (see Figure 1).
 - B. PIAA Sporza (with spoiler) – Position the left end of the blade between the first two guide tabs (from the left) on the wiper arm. Position the third, thicker, tab between the wiper blade and the spoiler...This will be a press-fit (see Figure 2).

NOTE: If you find that the driver side wiper blade chatters at the left end, you can remove the snap-on guide from the original blade (Figure 3) and snap it onto the new PIAA or Bosch blade assembly (except Bosch Excell), see Figure 4. The guide will not line up on the blade in the exact same position as it was on the original blade...but it will snap onto the new blade and then fit in between the first two guide tabs on the wiper arm.



Figure 1



Figure 2

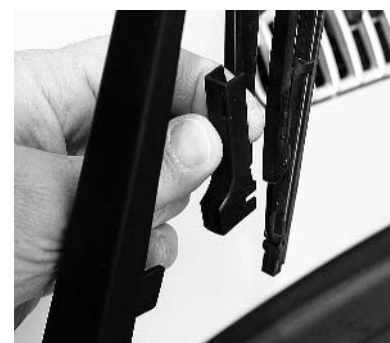


Figure 3



Figure 4

BAVARIAN
autosport

275 Constitution Avenue, Portsmouth, NH 03801

Call Toll Free: **1.800.535.2002**

• 603.427.2002 • Fax 800.507.2002 • www.BavAuto.com