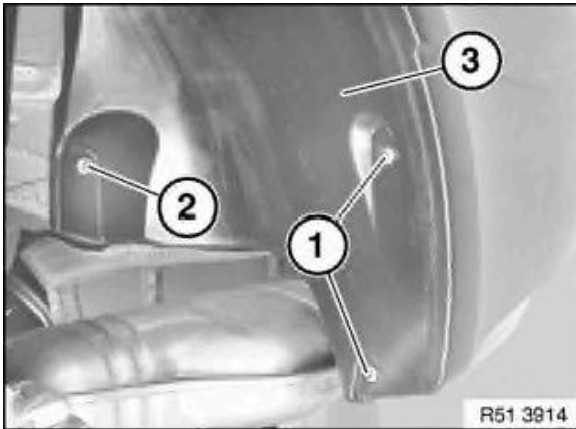
**Special tools required:**

- 00 9 317


**Note:**

The operation is described on the left side; proceed in the same way for the right side.


Release screws (1) and nuts (2).

Installation:


Make sure wheel arch trim (3) is in correct position.

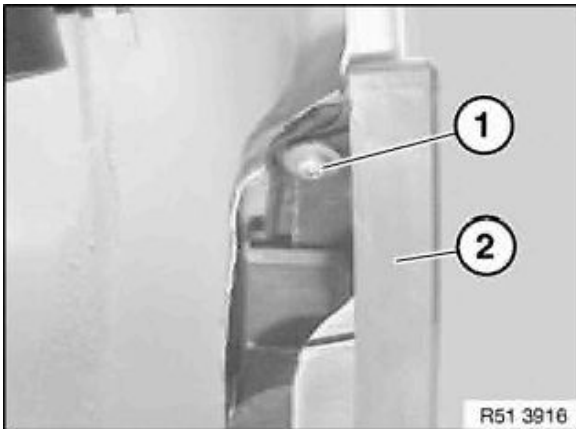


Press wheel arch trim slightly to one side and release screw (1) on bumper trim (2).

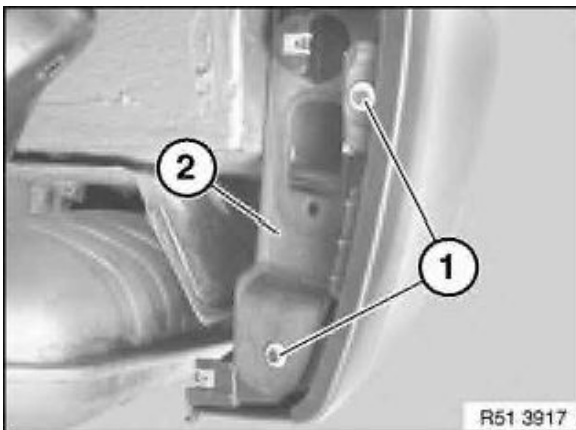


Release screws (1) on holder (2).

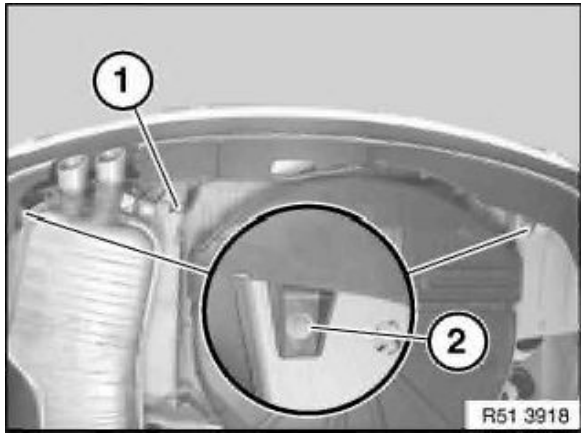

Release screw (1) and nuts (2).

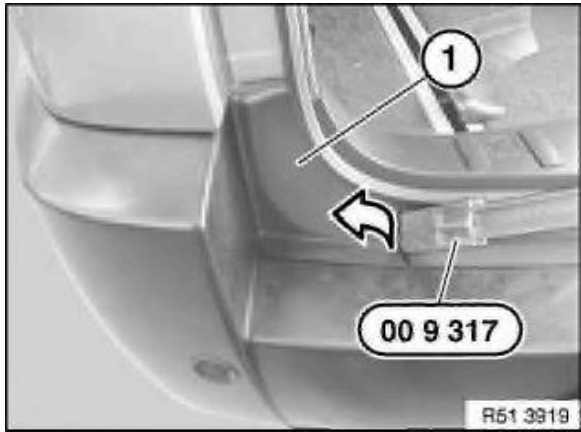


Lever out trim (1) with special tool 00 9 317 in direction of arrow.

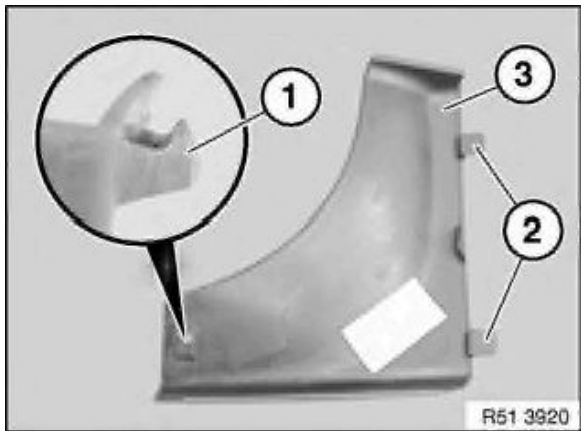


Installation:

Catch (1) and guides (2) of trim (3) must not be damaged.

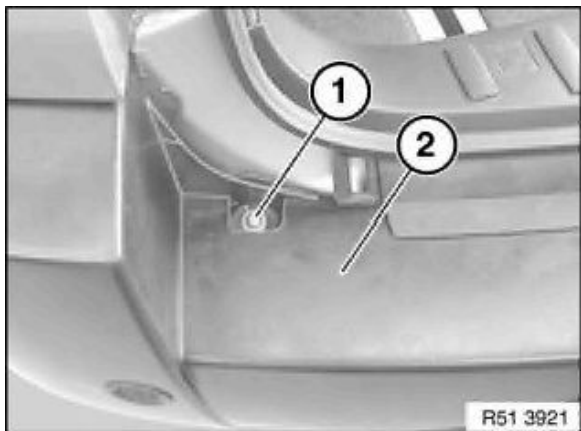

Release screw (1) on bumper trim (2) on left and right.

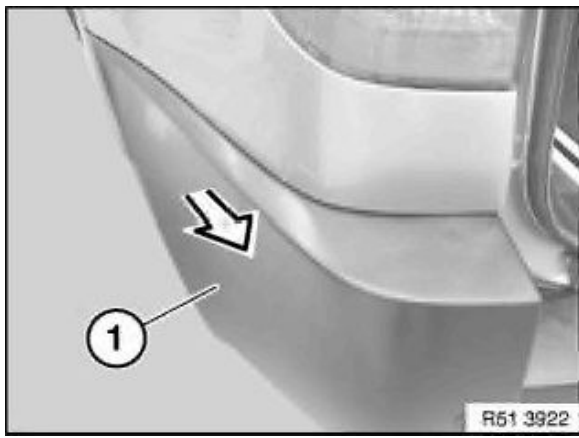


Important!

Risk of damage!

Do not detach bumper trim (1) at sides in outward direction.

Pull off bumper trim (1) for side panel in direction of arrow.

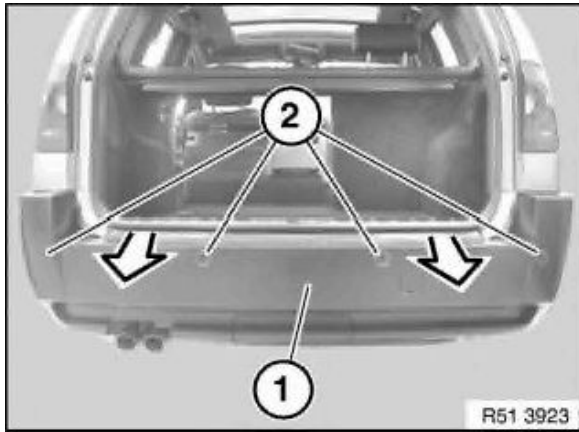

Pull out bumper trim (1) in direction of arrow and remove with aid of a 2nd person.

Note:

Version with Park Distance Control:

If necessary, pull bumper trim off a little and disconnect plug connections of ultrasonic transducers (2).

Remove bumper trim (1) with aid of a second person.